

AYAZSHOP TONER KARTUŞ / YAZICI UYUMLULUK TABLOSU 29/11/2014

Marka	ANA ÜRÜN KODU	Yazıcılar	UYUMLU KODU	YAZICILAR	MARKA
HP	C3906	HPLaserjet5L/6L/LJ3100/LJ3150	EP-A/AX	Canon EP-A/LBP 440/ 445/ 460/ 465/ 660	CANON
HP	C3903A	HP LJ 5P/6P/5MP/6MP	EP-V	Canon LBP-VX/430N	CANON
HP	C4092A	HP Laser jet 1100/1100A/3200/CANON LBP1120/800/22X	EP-22	Canon LBP-200/ 250/ 350/ 800/ 810/ CANON LBP1110series/ CANON LBP-1120	CANON
HP	C4096A	HP LaserJet 2100/ 2100M/ 2100TN/ 2200/ 2200DSE/ 2200DT/ 2200DN/ 2200DTN, CANON LBP-470/ 1000/ 1310	EP-32	Canon LBP-32X/P100/1000	CANON
HP	C92298A	HP LJ 4/4+/4M/4M+/5/5M/5N	EP-E	Canon LBP-260C/405/450/800/860/1260/EX/ZX/81V/P270/P430/Fileprint 300	CANON
HP	C7115A	HP Laser jet 1000/1200/1220/3300/3310/3320/3330 / 3380/1000W/1005W/1220/CANON LBP-1210	EP-25	Canon LBP-1210	CANON
HP	C4127A	HP LaserJet 4000/ 4000N/ 4000T/ 4000TN/ 4050/ 4050N CANON LBP-1760	EP-52	Canon LBP-1660/1760/P370/52X	CANON
HP	C4129A-X	HP LaserJet 5000/ 5000/ 5000N/ 5000LE/ 5100/ 5100DTN/ 5100TN CANON LBP-840/ 850/ 870/ 880/ 910/ 1610/ 1620/ 1810/ 1820, CANON Image Class 2200/ 2210/ 2220/ LP-3000/ 3010	EP-62	Canon LBP-62X/840/850/880/910 class 2200/2210/2220/2250	CANON
HP	C4182X	HP LaserJet 8100/ 8100DN/ 8100MFP/ 8100N/ 8150/ 8150HN/ 8150MFP/ 8150N CANON LBP-950/ 3260	EP-72	Canon LBP-72,Imageclass4000	CANON
HP	CC364A – 390A	P4014-4015-4515			
HP	CF214A	HP LaserJet Enterprise 700 M712dn/M712xh/M725	CRG-533	CanonLBP-8710/8710e/8720/8730i	CANON
HP	CB435A/436A/CE285A	"HP LaserJet P1100/P1102/P1102W/M1130/1210MFP HP LaserJet Pro M1132 Multifunction Printer (CE847A) - Specifications Canon LBP3018/LBP3100/3010/3108/3050 /Canon LBP3250	CRG-712-713-9013-313-312-912	Canon LBP-3018 / Laser i-sensys LBP 3010 / LBP 6000 / 6018 / LBP-3018 / Laser i-sensys LBP 3010 /Canon Laser Shot LBP 3250	CANON
HP	CE255A	HP LaserJet P3015/P3015D/P3015DN/P3015X	CRG-724-324-524	Canon LBP 6750dn LBPP6700	CANON
HP	CB435A	HP P1005/ P1006/ P1007/ P1008	CRG-712-312-912	Canon LBP-3018 / Laser i-sensys LBP 3010	CANON
HP	CB436A	HP P1500/P1505/1522/M1120/M1120N/M1522N/M1522F/P1505N Canon LBP3250"	CRG-713-313-913	Canon Laser Shot LBP 3250	CANON
HP	CE278A	HP laser Pro P1560/1566/1600(USA)/1606/M1536dnf / Canon MF4410/4412/4420/4550/4570/D520	CRG-728 -328-128 CRG-126/326/726/926	Canon IC MF4570dn/4550d/4452/4450 Canon iC MF4420n/4412/4410 Canon iC D520 / Canon LBP 6200	CANON

HP	CE285A	"HP LaserJet P1100/P1102/P1102W/M1130/1210MFP HP LaserJet Pro M1132 Multifunction Printer (CE847A) - Specifications	CRG-725-125-325-925	Canon imageCLASS LBP6000 / 6018	CANON
HP	CE505A	HP LaserJet P2035/ P2035n/ P2055dn, Canon imageCLASS LBP6300dn/ MF5850dn/ MF5880dn Canon i-SENSYS LBP6650dn/ MF5840dn, Canon LASER SHOT MF5870	CRG-119/319/519/719	Canon LBP 6300/6650/imageCLASS MF5850dn/5880dn	CANON
HP	CE390A-X	HP LaserJet Enterprise M4555h MFP/M4555t MFP/M4555fskm MFP	364A-X		HP
HP	CF280A-X	HP LJ P400 M401/M401N/M401DN/M425/M425DN/M425DW/M425N MFP	505A	Canon LBP 6300/6650/imageCLASS MF5850dn/5880dn	HP
HP	Q1338A-5942A-X	HP 4200			HP
HP	Q1339A -1338A	HPLaserJet4300/4300n/4300tn/4300dtn/4300dtns/4300dtnsl	1338A		HP
HP	Q2610A	HP Laser jet 2300			HP
HP	Q2612A	"HP LaserJet 1010/1012/1015/3015/3020/3030/1319/3050/3052/3055 CANON LBP2900/3000"	CRG-703-103-303 / FX-10	Canon LBP-2900/ 3000	CANON
HP	Q2613A	HP Laser jet 1300/1300N/1300XI	EP-25	Canon LBP-1210	CANON
HP	Q2624A	HP Laser jet 1150/1150N			
HP	Q5942A	HP 4240/4250/4350			
HP	Q5942A	HPLaserJet4250/4250n/4250t/4250tn/4250dtn/4250dtnsL /4350/4350n/4350t/4350tn/4350dtn/4350dtnsL HPLaserJet4345/4345x/4345xm/M4345/M4345x/M4345xs/M4345 MFP HPLaserJet4200/4200n/4200tn/4200dtn/4200dtns/4200dtnsL HPLaserJet4300/4300n/4300tn/4300dtn/4300dtns/43	1338-1339		HP
HP	Q5945A	HP LaserJET 4345Series			
HP	Q5949A	HP LaserJet 1320/ 1320N/ 1320TN/ 3390MFP/ 3392MFP, CANON LBP-3300/ 3360	CRG-708	Canon SHOT LBP3300/ 3360	CANON
HP	Q6511A	HP Laser jet 2400/2420/2410/2430/CANON LBP3460	CRG-110/310/510/710	Canon LBP 3410/3460	CANON
HP	Q7516A	HP Laser Jet5200/ LBP 3500	CRG-309/509	Canon SHOT LBP3500	CANON
HP	Q7551A	HP LaserJet P3005/ P3005D/ P3005N/ P3005DN/ P3005X, M3027MFP/ MG3027XMFP/ MG3035MFP/ MG3035XS MGFP			HP

HP	Q7553A	HP LaserJet P2010/P2015/P2014/M2727nf MFP/LBP3310/3370/Canon LBP-3310/3370	CRG-715-315-515	Canon SHOT LBP3310/ 3370	CANON
HP	7570	HP LaserJet M5025 MFP/ M5035 MFP/ M5035X MFP/ M5035XS MFP	7516 / CRG-257	Canon LBP8610/8620/8630	HP-CANON
HP	Q2624X	HP Laser jet 1150/1150N			HP
HP	Q2613AC/Q2624A/C7115A	"HP LaserJet 1000/1005/1200/1220 Printer Series HP LaserJet 3300/3310/3320/3330/3380 Series Canon LBP-1210 HP LaserJet 1150/1150n HP LaserJet 1300/1300n/1300xi	EP-25	Canon LBP-1210	CANON
HP	Q7553AC/Q5949AC	"HP LaserJet 1320 Printer Series;HP LaserJet 3390/3392 Series; Canon LBP-3300 HP LaserJet P2014/P2015 Printer Series HP LaserJet M2727 MFP series Canon LBP-3310/3370	CRG-308/508/708	Canon SHOT LBP3300/ 3360 / Canon SHOT LBP3310/ 3370	CANON
HP	CE250-251-252-253A / 400/401/402/403	HP CM 3525/3530 / Canon lbp 5460	GPR-29	Canon LBP 7700C/7750Cdn (HP 3525 Printer:CE250-3A)	CANON
HP	CB540-CE320-CF210- 125A / 131A -128A	HP Color LaserJet CP1215/1215n/1518ni/HP Color LaserJet CM1312/1312nfi	CRG-716 / CRG-316	Canon LBP 5050/5050n/iC MF8030/8050 (HP CB540-3)	CANON
HP	CC530-531-532-533A / CRG718	HP Color LaserJet CP2020/2025/2025n/2025dn/2025xHP Color LaserJet CM2320n/2320nfi/2320fix	CRG-718	Canon LBP 7200/7200cn/iC MF8330/8350Cdn (HP CC530-3)	CANON
HP	CE310-311-312-313 / 126A	CP1025 /LaserJet Pro 100 renkli MFP M175nw	CRG-729	Canon LBP7010/7018 (HP CE310-3A)	CANON
HP	Q6000A/6001/6002/6003 / 124A	HP2600/1600/2605/1015/1017	CRG-707	Canon LBP5000/5100	CANON
HP	CE320-321-322-323A / 128A	HP CM1415fwn/HP laserjetPRO CP1525	CRG-716 / CRG-316	Canon LBP 5050/5050n/iC MF8030/8050 (HP CB540-3)	CANON
HP	CE 260-261-262-263A	HP Color LaserJet CP4025 / 4525			
HP	CE740 -741-742-743A TONER	HP Color LaserJet CP 5225		Canon LBP9100/9500/9600 (HP CE740A-3A)	CANON
	CE 270-271-272-273 / 740 İLE UYUMLU	HP Color LaserJet CP 5525		Canon LBP9100/9500/9600 (HP CE740A-3A)	HP
	CF210	HP M251N/ M251NW/ M276N/ M276NW	CRG-331	Canon LBP-7110CN/7110CW	CANON
Samsung	ML-1450	Samsung ML-1450/1440/1451N Samsung ML-6060	Xerox Docuprint P 1210 Xerox Phaser 3310 IBM InfoPrint 12	Xerox Docuprint P 1210 Xerox Phaser 3310 IBM InfoPrint 12	XEROX-IBM
Samsung	ML-1210	ML-1210	3110 / 3210	Xerox Phaser 3110/3210/580/550 / Lexmark E210	XEROX
Samsung	ML-1610D2 / 2010 / 4725	Samsung ML1610/2010/2510/2570/2571N	Xerox Phaser 3117/3122/3124 Xerox Phaser 3125 Dell 1100/1110	PE220 (013R00621) / Xerox workcenter PE220 / Xerox Phaser 3200MFP / 3200(113R00730)	XEROX -DELL

Samsung	ML-1710 / 1510 / 4100 / 4200	Samsung ML1500/1510/1520/1710/1740/1750/1755
Samsung	ML-2010 / 1610	Samsung ML1610/2010/2510/2570/2571N
Samsung	ML-2150-2151	Samsung ML2150/2151N/2152W/2550/2551/2552
Samsung	ML-2250 – 4720	Samsung ML2250/2251N/2251NP/2252W
Samsung	ML-2850 / 2855 / MLT-209	Samsung ML-2850/2850D/2851/2851ND
Samsung	ML-3050 -3051	Samsung ML3050/ML3051N/ML3051ND / SCX-5530FN ML-3470/3470D/3471/3471ND/SCX-5635FN/5835FN/5935FN
Samsung	ML-3470 / 3471 / 3050	Samsung ML-3470D/ML-3471ND
Samsung	ML-3560 – 3561	Samsung ML-3560/3561N/3562ND
Samsung	ML-4550 – 3560	Samsung ML-4050/4050N/4551N/4551ND/4551NDR
Samsung	MLT-D106 Toner	Samsung ML-2245
Samsung	MLT-D101S	Samsung ML-2160/2162/2165/2168; SCX-3400/3405/SF-760P / SF-761P
Samsung	MLT-D104	SAMSUNG ML1666/1660/1661/1665/1673/1674/1678;SCX-3201/3218/3206
Samsung	MLT-D208L	SCX-5635FN/5635HN/5835FN
Samsung	MLT-D209L -2850	SCX-4824FN/4828FN/ML2855
Samsung	MLT-D205	ML-3310/3312/3710/3712ND SCX-4823/4823HD/5737/5637HR/5639/5739
Samsung	MLT-D305L	ML3750nd
Samsung	MLT-D104S	ML1660/1661/1665/1666/SCX3201/3206/3218/3207/1667/SCX-3200/SCX-3210/SCX-3205K/SCX-3217K/ML-1865W/ML-1860/ML-1861/ML-1670
Samsung	MLT-D105	ML1910/1911/1915/2525/2526/2580N/2581 SCX4600/4601/4623F/4623X/SF650/650P/651/651
Samsung	MLT-D203	SAMSUNG SL-M3320/3820/4020/M3370/3870/4070
Samsung	MLT-D204	SAMSUNG SL-M3325/3825/4025/M3375/3875/4075
Samsung	MLT-D206	Samsung SCX-5935FN
Samsung	MLT-D307S	Samsung ML-4510ND
Samsung	MLT-D305S	Samsung ML 3750ND
Samsung	MLT-D108S (ML-1640)	ML1640/1641/2240/2241
Samsung	MLT-D109S (SCX-4300)	SCX 4300
Samsung	MLT-D208L	Samsung ML-1635/ML3475/ ML-3475D / ML-3475ND / ML-3475D/GOV / ML-3475ND/GOV /SCX-5635HN/ SCX-5635FNK/SCX-5835/SCX-5638FN/5835FN/5935FN
Samsung	MLT-D209L / 2850	ML-2850-2855/SCX 4824HN/4826/4828
Samsung	SCX-4100 / 1710	SCX-4100
Samsung	SCX-4200	SCX-4200
Samsung	SCX-4216 / 1710	SCX-4016/4116/4216F
Samsung	SCX-4521 / 1610	SCX-4521F/4321
Samsung	SCX-4720 / 4520	SCX-4520/4720/4720FN
Samsung	SCX-4725 / 1610	SCX-4725F
Samsung	SCX-D5530(4K)	SCX-5350/5530FN
Samsung	SF-D560RA/XIL	SF-565P/565PR/562PRC/560R/560RC
Samsung	ML-D1630A	ML1630/SCX-4500

3100/3130/3120/3115/3121/PE16 PE114/ LEX. X215 / RICOH AC104	Xerox WorkCentre PE16 / PE114	XEROX LEXMARK RICOH
PE220/ 3117/3122/3124/3125 Dell-1100/1110	PE220/ 3117/3122/3124/3125 Dell-1100/1110 / ML 1610	XEROX -DELL
3420/3450/3425	Xerox Phaser 3450 / (106R00687)	XEROX
3150- PE120 / DELL 1600	PE120 (013R00601/606) / Xerox WorkCenter PE120/PE120i / PE120 (013R00601/606) / 3150 (109R00746) Xerox Phaser P3150	XEROX DELL
XEROX WORK CENTER 3250/3300/3405/3350/3351,Ricoh SP3300	3210/3220 (106R01485) / Xerox Workcentre 3210/3220	XEROX RICOH
phaser 3300/ 3428D/3428DN/3435	3428 (106R01246) / Xerox Phaser3428D	XEROX
3050	ML-3050	SAMSUNG
Phaser3500	3500 (106R01149) / Xerox Phaser 3500	XEROX
3560-3561	Xerox Phaser 3500	XEROX
		SAMSUNG
		SAMSUNG
phaser3300	Xerox Phaser 3300MFP	XEROX
3315	XEROX 3315 – 3325	XEROX
		SAMSUNG
3140-3155-3160	3140-3155-3160 / Xerox Phaser 3140 – (108R00908) / Xerox Phaser 3155/3160 / (108R00984)	XEROX
		SAMSUNG
		SAMSUNG
		SAMSUNG
		SAMSUNG
		SAMSUNG
1610	ML-1610	SAMSUNG
4200 / 1710	ML -4200 / 1710	SAMSUNG
3050	ML-3050	SAMSUNG
3250/3300/3405/3350/3351	Xerox Phaser 3250 / 3250/3300/3405/3350/3351	XEROX
PE114E	Xerox WorkCenter PE114E	SAMSUNG
4300 -4200-1710	3119 (013R00625) / Xerox WorkCentre 3119	SAMSUNG
1710	1710	SAMSUNG
1610	1610	SAMSUNG
2250	2250	SAMSUNG
1610	1610	SAMSUNG
3050	3050	SAMSUNG
1710	1710	SAMSUNG

Xerox	3100 (106R01378)	Xerox Phaser 3100S/3100X/3100MFP
Xerox	3110 (109R00639)	Xerox Phaser 3110/3210
Xerox	3115/3130 (109R00725)	Xerox Phaser 3120/3121/3130/3115/3116
Xerox	3117/3124 (106R01159)	Xerox Phaser 3117, 3122, 3124, 3125
Xerox	3119 (013R00625)	Xerox Workcentre 3119
Xerox	3140/3155/3160(108R00908)	XEROX 3140/3155/3160
Xerox	3150 (109R00747)	XeroxPhaserP3150
Xerox	3200(113R00730)	Xerox 3200MFP
Xerox	3210/3220 (106R01486)	Xerox Phaser 3110/3210/580/550
Xerox	3250 (106R01373)	XeroxPhaser3250
Xerox	3300 (106R01411)	XeroxPhaser3300MFP
Xerox	3420 (106R01033)	Xerox Phaser 3420/3425
Xerox	3428 (106R01245)	Xerox Phaser 3428D/3428DN
Xerox	3435 (106R01414)	Xerox 3435MFP
Xerox	3450 (106R00688)	Xerox Phaser 3450
Xerox	PE 16 (113R00667)	Xerox PE16
Xerox	PE114	Xerox WorkCenter PE114E
Xerox	PE120 (013R00606)	XeroxWorkCenterPE120/PE120i
Xerox	PE220 (013R00621)	FUJI Xerox Workcenter PE220
Xerox	3150 (109R00746)	Xerox Phaser 3150
Xerox	3210/3220 (106R01485)	Xerox WorkCentre 3210/3220
Xerox	108R00984	Xerox 3155/3160
Lexmark	E230 (12A8400) / X203 -204	Lexmark X203-204 E230/E232/E234/E238/E240/E330/E332/E340/E342
Lexmark	E250-252-350-352	LEXMARK E250D/350D/352D/450/450D/450DN/DELL1720/1720N/LEXMARK X203nX204n
Lexmark	X215(18S0090)	Lexmark X215
Lexmark	X340A11G/X340A21G	Lexmark X340, X340n, X342n
Lexmark	E260A / 264X	Lexmark E260-360-460
Lexmark	X264	Lexmark X264dn/X363/X364
Lexmark	E350	Lexmark E350D/E352DN
Lexmark	E360	Lexmark E360/E460/E462
Lexmark	ELexmark E210	Lexmark E210
Dell	1100(310-6640)	Dell 1100/1110
Dell	1600(310-5417)	Dell 1600n
Dell	1720(310-8706)	Dell 1720/1720dn
Dell	1700 (310-5400)	Dell 1700/1710
Dell	1125-1130	DELL 1125 – 1130
Dell	Dell1160/331-7335	Dell B1160/116W
Dell	Dell 1260/331-7327	Dell B1260dn/B1265dnf
Dell	1815	Dell 1815
Dell	330-2665	Dell 2330D/2330DN/2350D/2350DN
Brother	TN350/TN2000/TN2005/TN2025/TN2050/TN2075/TN25J	Brother HL-2030/2040/2045/2070N/2075/FAX 2810/2820/2850/2910/2920/DCP- 7010/7020/7025/MF7220/7225/7420/7820N

2500	OKI 2500	OKI
ML-1210	ML-1210-1120	SAMSUNG
ML-1710	ML-1210	SAMSUNG
ML-1610	ML-1710	SAMSUNG
Scx-4200-4300	ML-1610	SAMSUNG
Scx-4623	Scx-4200-4300	SAMSUNG
ML-2250	Scx-4623	SAMSUNG
ML-1610	ML-2250	SAMSUNG
ML-1210	ML-1610	SAMSUNG
ML-2850	ML-2850	SAMSUNG
ML-2850	ML-2850	SAMSUNG
ML-2150-2550	ML-2150-2550	SAMSUNG
ML-3050	ML-3050	SAMSUNG
ML-3050	ML-3050	SAMSUNG
ML-2150-2550	ML-2150-2550	SAMSUNG
ML-1710	ML-2150-2550	SAMSUNG
SCX-4100 – 1710	SCX-4100	SAMSUNG
ML-2250	ML-2250	SAMSUNG
ML-1610	ML-1610	SAMSUNG
ML-2250	ML-2250	SAMSUNG
ML-2850	Xerox Workcentre 3210/3220	SAMSUNG
4623 / MLT-D105	SCX-4623 / MLT-D105	SAMSUNG
270P	270P	TOSHIBA
E250 / E350	E250 / E350	LEXMARK
ML-1710	ML-1710	SAMSUNG
E230	E230	LEXMARK
2330	2330	DELL
E260	E260	LEXMARK
E250	E250	LEXMARK
E260	E260	LEXMARK
E210	ML-1210	SAMSUNG
ML-1610	ML-1610	SAMSUNG
ML-2250	ML-2250	SAMSUNG
E250	E250	LEXMARK
E230	E230	LEXMARK
D105	SAMSUNG SCX-4623	SAMSUNG
MLT-D101	2165- 3405 / 101S	SAMSUNG
MLT-D103	SAMSUNG LaserJet ML 2955ND / 2956 / 2951 / 2541 / 2547	SAMSUNG
ML-3050	SAMSUNG ML-3050	SAMSUNG
E260	LEXMARK E260	LEXMARK
TN-2025	TN-2025	Brother

Brother	TN360/TN2120/TN2125/TN2130/TN2150	Brother HL-2140/2150N/2170W/DCP-7030/7040/MF7045/7320/7340/7440/7450/7840N	TN-2140	TN-2140	Brother
Brother	TN420	Brother HL-2240D/2250D/2270DW/DCP-7060D / MF7470D / MF7360 / MF7860DN	TN-2260-2280	TN-2260-2280	Brother
Brother	TN620/3230/3235/3250/43J / 3K	Brother HL-5340D/5350DN/5370DN/MF8370DN/8880DN/8890/DCP-8085DN	TN-3290	TN-3290	Brother
Brother	TN570/TN3060 / 6.7K	Brother HL-5140/5150/5170/DCP-8040/8045/MF8220/8440/8640/8840	TN-3060	TN-3060	Brother
Brother	TN550/3140 /3.5K	Brother HL-5240/5250DN/5280/DCP-8060/8065/MF8460DN/8470/8860DN/8670/8860/8870	TN-3145 / 3185 / 3130	TN-3145 / 3185 / 3130	Brother
RICOH	Ricoh AC205/205L/ FX 200	Ricoh AC205/205L/ FX 200	2250	ML-2250	SAMSUNG